



*The display was designed to contain 6-12 GreenComputer products.
We recommend that you do not leave the keys in the lock.*

You will need:

Allen Key 4mm x 1

Allen Key 5mm x 1

A partner

STEP 1

Open the box and prepare the tools



STEP 2

Use L-shaped and the U-shaped parts



STEP 3

Take the screws below and fix the pieces you have previously put together. Place the two screws before tightening.



STEP 4

Repeat steps 1 and 2 with the other L-shaped part.

STEP 5

Once the base is screwed, you can insert the first panel (the white side is facing you)





STEP 6

When the first panel is in place, put the plastic seal to be able to slide the second panel.





STEP 7

Take the other U-shaped part (small one) and place it over the white panels. Take the H-shaped part and screw each side.

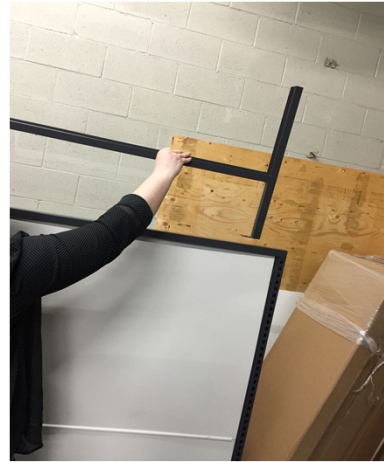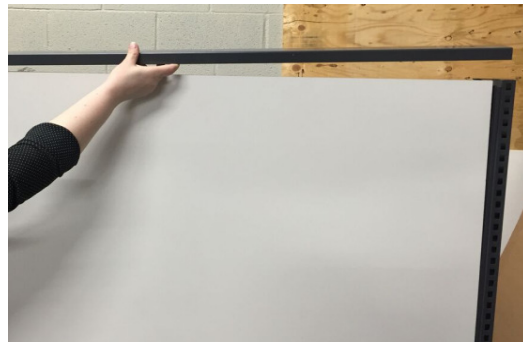



STEP 8

Take coroplast and insert it into the H-shaped part.

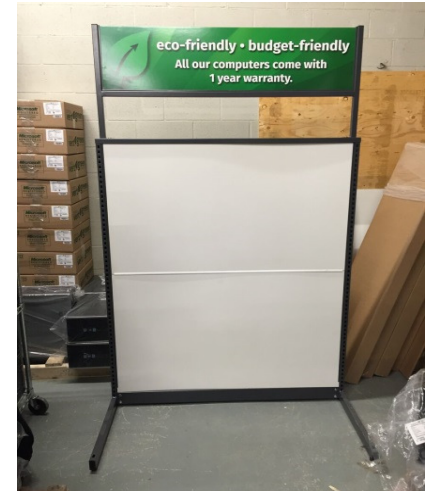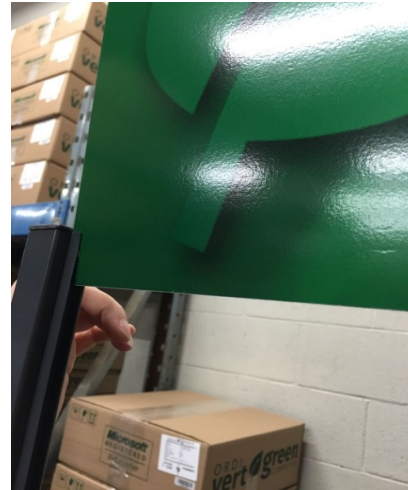

STEP 9

It's time to put the unit on the structure. Elevate slightly the display so you can slide it on the structure. You can adjust the elevation legs if necessary.

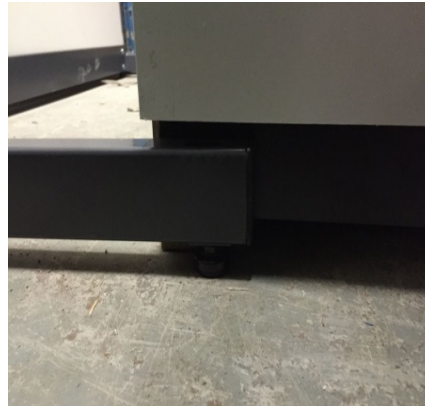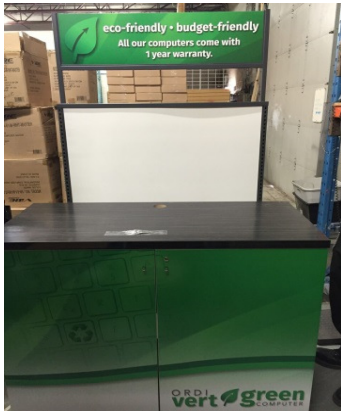

STEP 10

Install the tablet and place it on the display. Remove the plastic.

